


◀ (example) Core Drill ▶ Copy

Tool Measure Parameters (in)						
R25	R23	R26	R24	R09	R21	R22
	NA	NA	NA	NA	NA	NA

☐ Diameter ☒ Length ☐ Both

☐ Smallest Diameter ☐ Largest Diameter

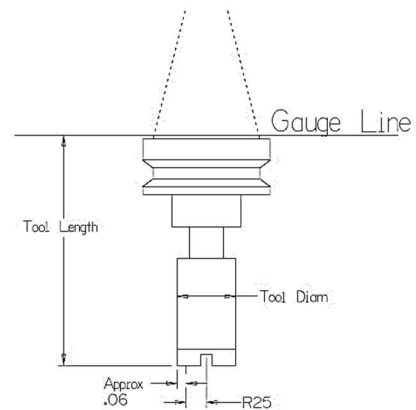

← (example) Finger bit Copy →

Tool Measure Parameters (in)						
R25	R23	R26	R24	R09	R21	R22
	NA				NA	NA

☐ Diameter ☐ Length ☐ Both

☐ Smallest Diameter ☐ Largest Diameter

